

ASSEMBLY INSTRUCTIONS SHEET

Adjustable Cooking Grate - 24"

ACG24

Prior to assembly, please read these instructions carefully. We suggest you carry out assembly on a soft surface so as to avoid scratching the paint.

- * Do not discard any of packaging until you have checked that you have all parts and pack of fittings.
- * Keep children away during assembly. This item contains small parts which can be swallowed by children.
- * Retain the assembly instructions for future reference.

Part list:

NO.	Parts	Qty.
A	Handle	1
B	Adjustable grill	1
C	Turn lock screw	1
D	Stake	1
E	Adjustable tube	1

Assembly Instructions:

Step 1

Slide the Handle(A) pass through the Adjustable grill(B) and Adjustable tube(E)

Step 2

Tighten the Stake(D) to the Handle(A)

Step 3


Push the ground stake in to a hard compact surface or secure between several rocks. Make sure ground stake is well into the ground. Loosen the Turn lock screw(C) and swing grill into open fire pit. Add grilling items
Adjust Turn lock screw(C) and Adjustable tube(E) to adjust the height of the grill

Helpful Hints:

- Turn grill slowly to avoid rolling the food off the grill
- Be cautious, the grill will be hot if placed over a fire.
Use hand protection.
- Do not place the grill in an area where it could be easily tripped over

Cleaning instructions

The Adjustable Cooking Grate should be cleaned periodically using hot, soapy water. Use a wire brush, steel wool or a scouring pad to remove stubborn or loose spots

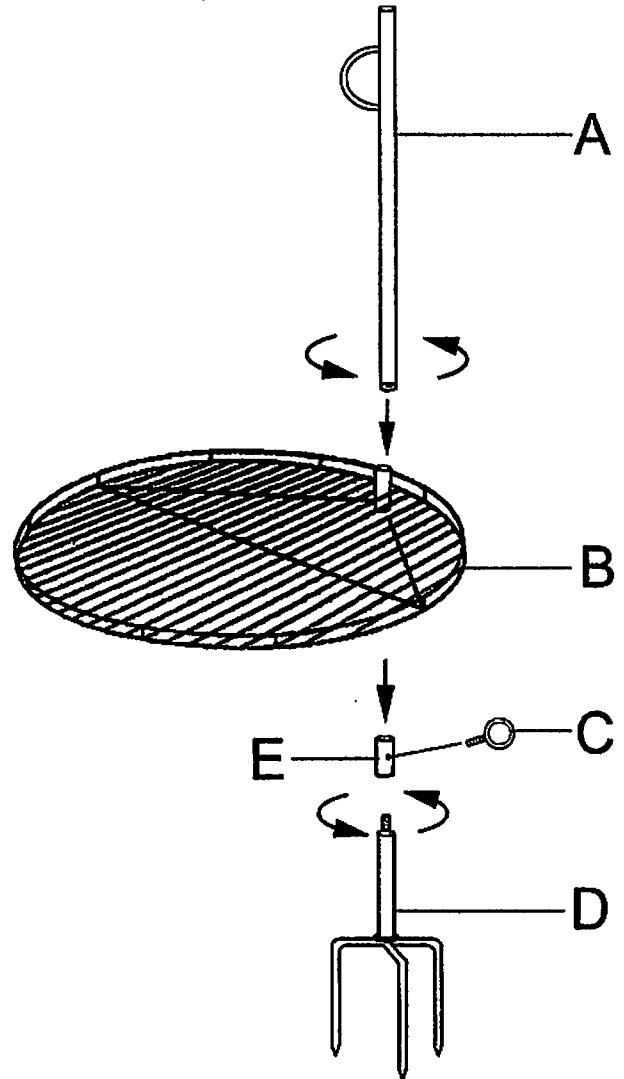

**PLEASE READ AND UNDERSTAND ALL SAFETY RULES BEFORE
ASSEMBLY AND USE OF THE ADJUSTABLE COOKING GRATE WITH POST**

RULES FOR SAFE OPERATION

- **Caution: For outdoor use only**
- **Use on hard compact surface such as packed dirt or between rocks**
- **For adult use only-do not allow children to use the grill**
- **Do not use on lawns, wooden decks, concrete or asphalt**
- **Do not use indoors or under a patio roof**
- **Do not use in windy conditions**
- **Do not use leave unattended at any time**
- **Do not use under low hanging tree branches, trellis, overhangs of any kind including covered porches.**
- **Care should be taken to make sure all combustibles, material is far enough away from the fire and grill to not ignite.**
- **Always use in accordance with all applicable local and state fire codes.**
- **Failure to follow these instructions could result in a hazardous fire causing property damage or physical injury**

Warning! For your safety:

- **Operate grill with caution**
- **Keep children and pets away from the grill and fire while it is in use**
- **Exercise the same precautions you would with any open fire.**
- **Do not wear flammable or loose clothing when tending to an open fire**
- **Avoid touching surfaces, as they will be extremely hot.**
- **Assure fire is completely extinguished before leaving**
- **Any modifications to this appliance may be dangerous and are not permitted**