

TJK GAS GRILL HEAD

Assembly Manual





SCAN THE QR CODE FOR ASSEMBLY VIDEO

English

The appliance is FOR OUTDOOR USE ONLY. It is not to be used inside a garage, other building or any type of enclosed area. Combustible materials should never be within 18 inches of the bottom, back or sides of your MHP Gas Barbecue Grill.

- The WNK Grill head is specifically designed to fit these MHP mounting options.
 - WC4 Four Legged Open Cart
 - MPP In-ground Post
 - MPB Patio/Deck Base

- OCOL/OCOLB with OM Base
- OCOL/OCOLB with OP Base
- OCOL/OCOLB with OC Base
- The gas supply may be either LP or Natural Gas



Make sure your base is assembled before continuing.

The base assembly instructions should be included with your base.

Visit our website mhpgrills. com/info/owners-manuals/ for a complete list of assembly videos & manuals

DANGER: IF YOU SMELL GAS

- 1. Shut off the main gas supply to the grill
- 2. Extinguish any open flame
- 3. Open lid
- **4.** If odor continues, keep away from the grill and immediately call your gas supplier or your fire department. Failure to follow these instructions could result in fire or explosion which could cause property damage, personal injury or death.

WARNING: FOR YOUR SAFETY

- 1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance
- 2. An LP cylinder not connected for use should not be stored in the vicinity of this or any other appliance.
- **3.** Follow all leak-test procedures on page 10 of this manual carefully before using. Do this even if the grill was dealer assembled. Do not test for leaks with a match or any open flame. Do not try to light this grill without reading the "Lighting" instructions.

OR

BOXES/BAGS:

You should have the following boxes/bags containing the different parts and hardware needed to assemble your grill.



GG-GRATE-SS Briauette Grate



OR



▲ TIK-SEAR-PK SearMagic Cooking Grids

⋖ GG-SS-GRID Stainless Steel Cooking Grids



TJK-LP Control Panel for LP Gas Grill (includes hose and regulator)



TJK-NATControl Panel for Natural Gas Grill





OWNER'S MANUAL BAG

Includes:

- · Owner's Manual • Temperature Gauge
- Venturi Tube Cleaner
- (2) Lid Pivot Pins



BRIQUETTE BAG 67 Briquettes



END CAPS/HANDLE Includes hardware

TOOLS LIST:



ADJUSTABLE WRENCH



3/4" COMBINATION WRENCH



7/16" COMBINATION WRENCH (2)



3/8" COMBINATION WRENCH



PHILLIPS SCREWDRIVER

ASSEMBLY PREPARATION



Choose a Location where you are going to set up your grill. Make sure there is enough room and you have a flat surface. Improper assembly may be dangerous. Please carefully follow the assembly instructions in this manual.

- Place the box facing up
- Remove the packaging material followed by the grill head components
- Set the components on a flat surface
- Check to see if all components are included and that you have the appropriate tools to begin the assembly. Remove all components and discard the box.



At this point you should already have your bottom casting attached to your mounting (See your mounting assembly manual for these steps).

Make sure your base is assembled before continuing. The base assembly instructions should be included with your base.

Visit our website mhpgrills.com/info/owners-manuals/ for a complete list of assembly videos & manuals






STEP 1 INSTALLING THE CONTROL PANEL



Remove the Burner

- Remove the grill burner by taking out the two small cotter pins located on the underside of the bottom grill casting (fig. a)
- Pull the burner up and out of the grill head (fig. b).

CONTINUED >

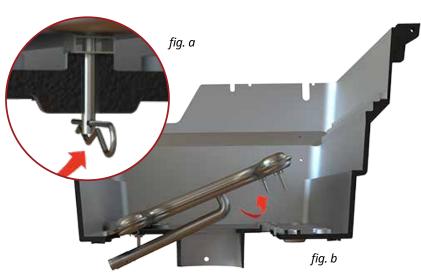

STEP 1 INSTALLING THE CONTROL PANEL, CONTINUED

Attaching the Control Panel Assembly to the Front of the Bottom Casting


- Attach the complete control panel assembly to the front of the grill bottom casting with two 1/4-20 Kep Nuts and hand tighten
- Make sure the valve orifices on the control panel align with the burner venturi correctly and that the venturi tubes go over the valve orifices at least 1/4" to 3/8". (see Valve Stem Engagement below)
- Tighten all nuts using a 7/16" combination wrench.



Connecting the Control Panel Support Brackets


Two support brackets are connected beneath the control panel to the grill bottom casting for added support.

- Push a 1/4 20 x 1-1/4" Phillips Head Bolt down through the grill bottom casting from the inside and continue through the back hole on the support bracket. Secure the bracket with a 1/4 - 20 Kep Nut.
- Attach the control panel to the support bracket by pushing up a 1/4 - 20 x 1/2" Phillips Head Bolt through the **front hole** of the support bracket and the lower lip of the control panel. Fasten bracket with a 1/4-20 Kep Nut.
- Tighten all nuts using a screwdriver and a 7/16" combination wrench.

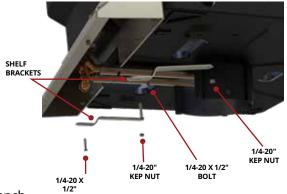

Reinstall the Burner

- Drop the burner into the bottom of the grill casting making sure the venturi tubes go through the bottom opening.
- The burner leg pins pins should align with the predrilled holes in the bottom of the grill pit.
- Reattach small cotter pins onto the burner leg pins.

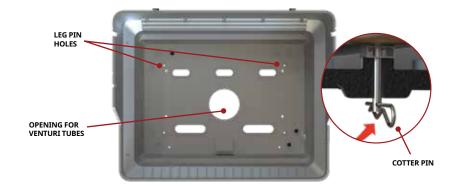

Venturi Engagement

At the top end of each valve there is a tiny gas opening known as the orifice. Gas exits the orifice and enters a venturi where it mixes with air coming in from the side air shutter. The proper mixture of air and gas produces a clean blue flame at the burner.

Make sure the valve orifice on the control panel aligns with the burner venturi tube correctly. The orifice should fit into the venturi tube 1/4" to 3/8".





INCORRECT

CORRECT


4

STEP 1 INSTALLING THE CONTROL PANEL, CONTINUED

Ignitor Wire Connection

Attach the wire from the ignitor module, located behind the control panel, to the porcelain insulator found on the underside of the bottom casting.

Be careful not to crack the delicate porcelain insulator

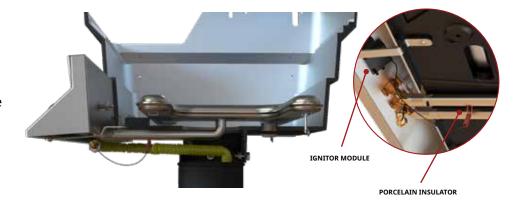

Attach Knobs to Control Panel

Attach the two control knobs to the grill by pushing them down securely onto the valve stems.



Battery Installation

- Place the AAA battery "+" side down into the ignitor module.
- Install push button over the battery and turn clockwise to tighten in place.



Connect the Gas Supply

Please reference the assembly manual that came with your grill mounting for directions on connecting the gas supply to your grill.

STEP 2 INSTALLING THE SIDE SHELVES



Side Shelf Kit

PARTS INCLUDED IN BOX:



SHELF (2)

KEP NUTS (8)



SIDE BRACKETS (4)

NYLOCK NUT (4)




PHILLIPS HEAD BOLTS (8)



Remove Plastic Protective Sticker

Before installing the side shelf, remove the plastic protective sticker from all sides of the shelves and shelf brackets.

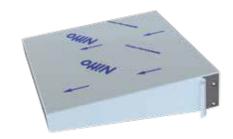

Mount Side Shelf Brackets

- Locate the side brackets and mount the brackets to the right side of the grill.
- Attach the brackets using the supplied Phillips Head Bolts and Kep Nuts (2 Phillips Head Bolts and Kep Nuts per bracket).
- Insert the Phillips Head Bolts into the pre-drilled holes from the inside of the bottom casting and attach the Kep Nuts on the outside.
- Tighten the Kep Nuts while making sure the brackets remain parallel with the grill using a screwdriver and a 7/16" combination wrench.
- Follow the above steps to mount the brackets to the left side of the grill.



Attach the Side Shelves

Once all brackets are in place, attach the Side Shelves.

- Place the left bottom shelf threaded screw into the left bottom bracket slot.
- Gently spread the shelf apart to insert the right bottom shelf threaded screw into the right bottom bracket slot.
- Tighten Nylock Nuts on the bottom threaded screws using a screwdriver and a 3/8" combination wrench. Make sure the nuts are snug but do not restrict movement of folding and unfolding of the shelf.
- Repeat steps to attached the second side shelf to the left side of the grill.
- Top threaded screws on shelf do NOT use nuts.




STEP 3 INSTALLING THE BRIQUETTE GRATE



GG-GRATE-SS Briquette Grate

PARTS INCLUDED IN BOX:





Install the Stainless Steel Briquette Grate by placing it into the bottom grill casting. The grate should rest level on the shelf edge just above the burner.



STEP 4 INSTALLING THE BRIQUETTES



BRIQUETTE BAG 67 Briquettes





- Place the porcelain briquettes on top of the grate.
- Place one at a time
- Carefully place the porcelain briquettes on the grate in the pattern shown making sure to only have one layer.
- This pattern helps to distribute heat evenly and reduce flare-ups.
- The bag includes 67 briquettes—you will need all 67 to fill the briquette grate properly.



STEP 5 ATTACHING THE TOP CASTING



PARTS NEEDED:



OWNER'S MANUAL BAG
You will find the parts you need
in the bag with your owner's
Manual

It is recommended someone assist you with this step.



LID PIVOT PINS



HITCH PINS

Attach the Top Casting

- Locate the top casting for your grill and place it on the back of the bottom casting, aligning the two back hinges.
- Slide the Lid Pivot Pin through both hinge holes and secure with a Hitch Pin.
- Repeat on opposite side.





STEP 6 INSTALLING THE TEMPERATURE GAUGE



OWNER'S MANUAL BAG The Temperature Gauge is included in the Owner's Manual bag

PARTS NEEDED:




TEMPERATURE GAUGE ASSEMBLY

Includes:


- Temperature Gauge
- Washer (2)
- Wing Nut

Installing the Temperature Gauge

- Insert the temperature gauge through one washer into the pre-drilled hole on the grill top casting making sure the gauge is facing outward.
- On the inside of the grill lid, install the second washer, then the Wing Nut to the temperature gauge post.
- Hand tighthen the Wing Nut until temperature gauge is snug against the casting.

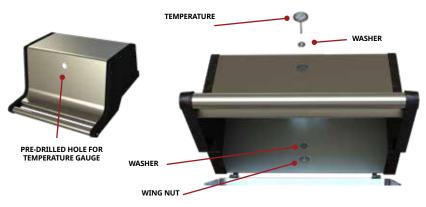

STEP 7 ADDING THE STAINLESS STEEL OR SEARMAGIC COOKING GRIDS

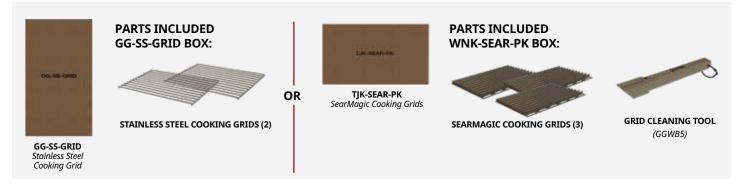





Installing Stainless Steel Cooking Grids

- The two stainless steel cooking grids should easily drop in side-by-side above both briquette grate and porcelain briquettes
- The top side of the Stainless Steel Grids has the rods on top of the frame.

Installing SearMagic Cooking Grids

- The three SearMagic cooking grids should easily drop in side-by-side above both the briquette grate and the porcelain briquettes.
- The SearMagic Grids are reversible. Use the ribbed side for making sear marks on steaks and use the smooth side for more delicate items.


STEP 8 ADDING THE WARMING RACK



Installing the TJK Swing-Away Warming Rack

The swing-away warming rack attaches to both the grill lid and the grill bottom casting.

- Insert the stationary rods into the top right and left mounting holes located on the grill lid.
- After inserting the stationary rods, flex the bottom swing rods to insert into the bottom right and left mounting holes located in the bottom grill casting.

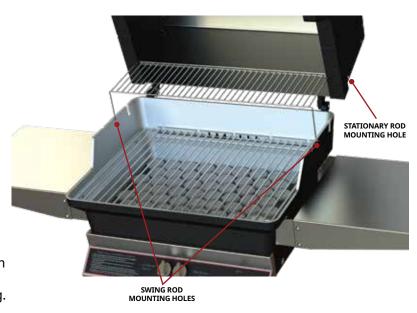



For complete steps on connecting your grill to a gas line please refer to the instructions included in the assembly manual for your specific mounting.

FOR NATURAL GAS & HARD-PLUMBED LP GAS INSTALLATIONS

BENDING STAINLESS STEEL TUBING



Do not make sharp bends when bending your flexible stainless-steel tubing to match the feed of your grill valve and position in the top notch of the post.

FOR LP GAS INSTALLATIONS



The LP Hose and Regulator is factory installed on your control panel. Make sure the LP hose runs through the hose retention notch or clip (depending on your specific grill mounting). For additional information, reference your grill mounting assembly

After you have successfully assembled your grill—hook up your gas lines and check all connections.

LEAK TESTING

- **(A)** LEAK TEST ALL GAS CONNECTIONS BEFORE USING YOUR GRILL.
- O DO NOT SMOKE WHILE LEAK TESTING.
- **OD NOT LEAK TEST WITH A MATCH OR OPEN FLAME.**
- OD NOT USE A GRILL THAT IS LEAKING GAS.
- O YOU SHOULD TEST FOR GAS LEAKS EVERY TIME YOU DISCONNECT AND RECONNECT A GAS FITTING.
- OR STORE ASSEMBLED.
- **ODE NOT IGNITE BURNERS WHEN LEAK TESTING.**

- For LP models, leak test with a full propane cylinder.
- ▶ For systems other than self-contained LP cylinders:
 - The grill and its individual shut-off valve must be disconnected from the gas supply piping systems during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa).
 - The grill must be isolated from the gas supply piping system by closing its own manual shut off valve during any pressure testing of the gas supply piping system at pressures equal to or less than 1/2 psi (3.5 kPa).

LEAK TESTING STEPS

- **1.** Grill burner control valves should be turned off and the gas turned on at source.
- **2.** Apply soap solution to all gas connections. To make soap solution, mix together equal amounts of liquid detergent and water.
- **3.** Soap bubbles will appear if there is a leak.
- **4.** Tighten the connection using a 3/4" combination wrench and adjustable wrench to make the proper seal (one wrench is used to hold the fitting while the other is used to tighten). Recheck for soap bubbles.

If a leak is detected...

If you have detected a leak try tightening and securing all connections. The use of two wrenches is recommended one wrench is used to hold fitting while the other is used to tighten.



Visit your local dealer or our online store www.mhponlinestore.com

Enhance Your Grill


Our premium accessories have been designed specifically for our grills with quality materials and craftsmanship



STAINLESS STEEL SIDE BURNER

The premium commercial grade stainless steel side burner is 12,000 BTU rated, has its own electronic ignition, and is factory assembled for simple bolt-on installation. Available for both Natural and LP Gas.


SBA3-N (Natural Gas) SBA3-P (LP Gas)

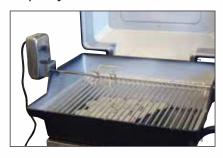

ROTISSERIE KIT

Rotisserie Kit includes RO6 stainless steel motor, motor mounting bracket, rotisserie rod, handle, bushing, forks and 3 ft. cord. Max. 25 lb. balanced load.

RKMHP

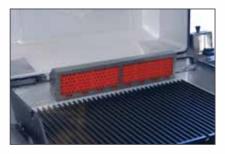

INFRA-ROAST ROTISSERIE BURNER SYSTEM

Constructed of commercial-grade stainless steel this 12,000 BTU rated burner heats up fast and seals in juices. Easy to install or remove when not in use. Available for Natural Gas or Propane. Rotisserie Kit (RKMHP) sold separately.

GGRRB3



SEARMAGIC® INFRARED SIDE GRILL

This 12,000 BTU stainless steel unit has a rust-free, anodized aluminum SearMagic® cooking grid that heats up faster and cooks food at a uniform temperature. The reversible grid provides increased cooking versatility allowing you to cook a greater variety of foods. The electronic ignition ensure easy and reliable starts while the pull-out drip tray allows for easy cleaning. The stainless steel cover provides protection and added convenience. Available for Natural Gas or Propane.

MHPSEAR

Protect Your Grill

Our grill covers are constructed of a durable polyester lined vinyl, designed to protect your grills from the elements.



Mid-Length Grill Cover Side Shelf Up GGCVPREM



Full-Length Grill Cover Side Shelf Up CV4PREM



Full-Length Grill Cover Side Shelves Down DDCVPREM

DON'T FORGET TO REGISTER YOUR GRILL!

It is the responsibility of the grill owner to complete and submit the warranty registration form to MHP in order for the warranty to be valid.

What you will need to register your grill:

- A bill of sale, canceled check, or payment record is required to verify the purchase date and establish warranty period.
- Model Number
- Serial Number
- Type of Grill Purchased (Natural or LP Gas)

How to find your grill model #/serial

The model number tag is located on the left end cap of the control panel.

Visit mhpgrillpartsonline.com/warranty-registration-form/ to register your grill online. A mail-in registration postcard is also included with your owner's manual.

YOUR MODEL #: TJK

YOUR SERIAL #:



Make the most out of your grilling experience!

From side burners and rotisseries to grill covers and more we carry a complete line of grill upgrades, accessories and grill parts designed specifically for your MHP Grill.

>>> Visit MHPGrills.com for more information

TECHNICAL SUPPORT

Modern Home Products

150 South Ram Road • Antioch, IL 60002 847.395.6556 • 888.647.4745

Customerservice@mhpgrills.com • www.mhpgrills.com

California Proposition 65 Warning: This product can expose you to chemicals including Chromium (hexavalent compounds), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.













